



This edge is the limit. The putter cannot hang over this edge or it will catch on the inner part of the bag

Putter footprint

Shaft (this can be off centre)